


# ED-5019C, ED-5019CL Electronic Measuring Tape Operation Manual

## 1. Introduction

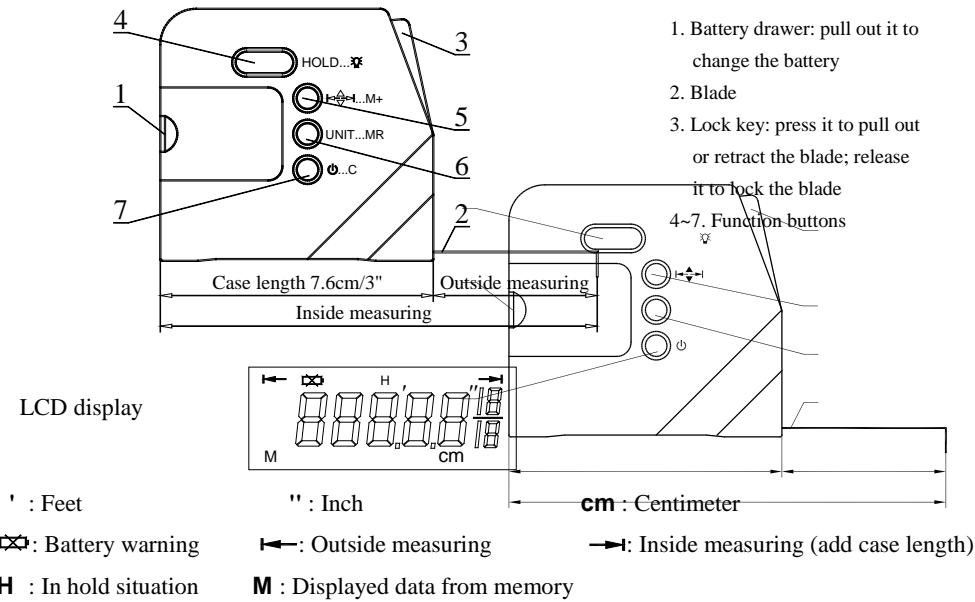

## 2. Functions of Buttons

Using buttons

First function: press shortly ✓ (HOLD, ←, UNIT, ⏻)

Second function: press and hold >1s ⏻ (⚡, M+, MR, C)

press shortly in hold ("H") situation ✓ (M+, MR)

### 2.1 HOLD...⚡

**HOLD:** Press shortly. Hold or free the measurement. In hold situation, "H" is displayed

⚡: Press and hold 1S. LCD backlight illuminates for 4 second(only for ED-5019CL)

### 2.2 ←...M+

←: Press shortly. Change outside or inside measuring mode and reverse LCD figures orderly:

outside measuring—inside measuring—outside measuring, LCD figures in opposite view—inside measuring, LCD in opposite view. Add case length 7.6cm in inside measuring mode

**M+:** Press and hold 1S. Turn into "H" situation, add measurement to memory and display "M" "H"

Press shortly in "H" situation. Result is same as above

### 2.3 UNIT...MR

**UNIT:** Press shortly. Convert unit orderly: cm—ft and inch—inch—decimal inch

**MR:** Press and hold 1S. Turn into "H" situation, recall the data in memory and display "M" "H"


Press shortly in "H" situation. Recall the memory data ("M" "H") or the hold data ("H")

## 2.4 ⏻...C

⏻: Press shortly. Power switch. Automatic shutoff after 6 minutes of inactivity

**C:** Press and hold 1S. Set zero in free situation

When displayed data is from memory("M" "H"), clear the memory to 0

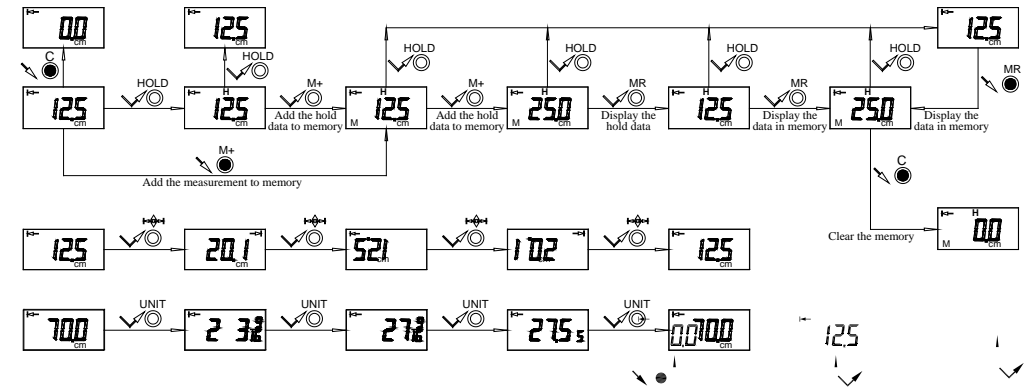

## 3. IMPORTANT

- Don't retract blade too fast (<1.5m/S) otherwise the measurement may be wrong or the tape may be damaged even hurt the people
- Blade must be retracted fully when change battery or display "E---0"
- Change battery when display blurredly or display ⚡
- Don't pull out blade fully otherwise the tape may be damaged-
- Don't use buttons when blade moving otherwise the measurement may be wrong
- Keep the blade clearly and dry
- Cleaning sensor: stick a 1.2×2.5cm bi-sided adhesive tape between scale 3-7cm on the blade. Pull the blade forth and back several times, the tape will bring dirt out. Take off the tape after cleaning

## 4. Frequently-asked Questions

Error messages	Reasons	Corrective action
Display ⚡	1. Voltage of battery has dropped 2. Suffer from strong interfere	1. Replace the battery 2. Turn off the power and turn on it again
Display "F xxxx" and not accurate	Blade moves too fast	Move the blade smoothly (<1.5m/S)
Display ⚡ after change battery	Sensor is dirty	Use double sided tape cleaning sensor
Display "E---0"	Blade not be retracted fully	Retract the blade fully
Display "E---8"	Blade is pulled out too much	Retract the blade
Button and display are dead	Suffer from strong interfere or crash	Take out the battery and insert it again